

Updates for 2023 version of DR-4020



1, Change band

The BAND button is on the back of the radio, press this button to switch between 40 meters and 20 meters.

2,RF power meter

The lower part of the display shows Transmitting power P, there are 3 scales on the transmitting power scale except the 0 scale, the first scale is about 1W, the second scale is about 3W, the third scale is about 5W (because the radio detects the RF voltage output to the antenna port, so the displayed power is only accurate when the SWR is close to 1).

3,Change step and USB/LSB

Press the VFO knob lightly and the step frequency will switch between 100KHz, 1KHz, and 100Hz. When the step frequency changes, there will be a small triangle above the corresponding frequency display on the display.

The markers are displayed. If you press the big knob in the MEM state, it will enter the VFO working state.

When the VFO knob is pressed for more than 1 second, it will toggle between USB and LSB.